


780/1480 Wiring diagram

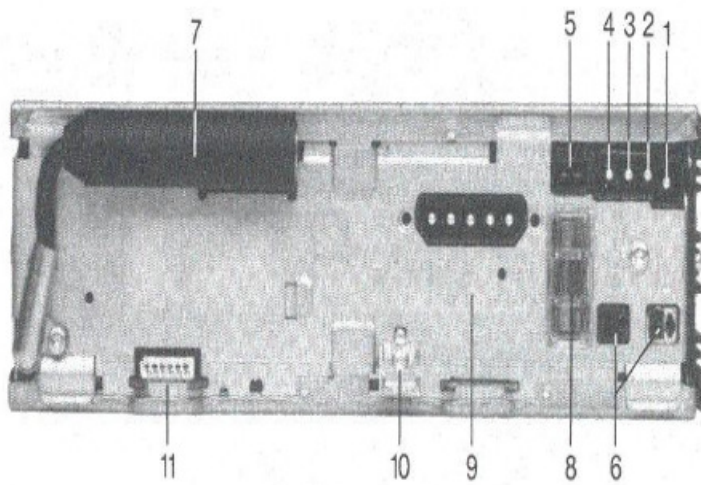

- 1 Chassis (-) (Terminal 31)
- 2 Switched plus (Terminal 75)
- 3 Illumination (+) (Terminal 58)
- 4 Permanent plus (Terminal 30)
- 5 Antenna / Amp Trigger socket
- 6 Loudspeaker sockets
- 7 Antenna socket
- 8 Fuse 6.3 AT
- 9 Connection socket for anti-theft circuit
- 10 Chassis contact for anti-theft circuit
- 11 Connection socket for line-out amplifier of sound system

Speaker Plug Part# 1064.967

Power Harness Part# 339.024